- Site Amenities BY SUPERIOR RECREATIONAL PRODUCTS




Model # B8PLAYERINNVP




A PLAYCORE Company

3/12/2019 Page 1 of 7

HARDWARE

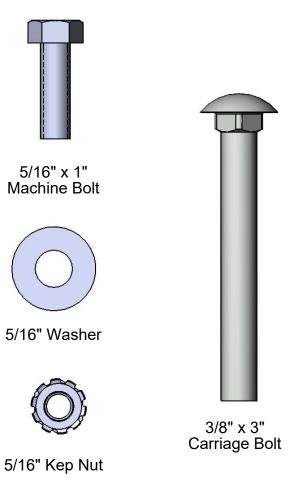

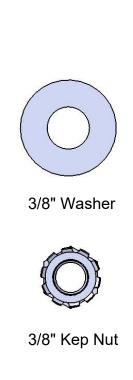



PRODUCT SPECIFICATIONS

B8PLAYERINNVP DELUXE PORTABLE BENCH WITHOUT BACK

Seat: 11 gauge die formed angle frame 1"x1-7/8" with 3" radius corners. 12 gauge sheet steel is precision punched with a 5/8" hole. 7 gauge x 1-1/2" flat bar center support and mounting bracket understructure. Electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.

Frame: 2-3/8" O.D. x 12 gauge pre-galvanized structural steel tubing. Tube ends are pre-galvanized steel capped. Seat mounting points are 7 gauge x 1-1/2" die stamped steel flat bar. Cross braces are 1" O.D. x 16 gauge pre-galvanized structural steel tubing. All electrically MIG welded.

Frame Coating: Electrostatic powder coated application oven cured.


Hardware: All stainless steel hardware fasteners.

Dimensions: 8' bench portable without back. Seats are 15" wide x 96" long. Seat height is 18-1/4". Total depth of bench is 22".



3/12/2019 Page 3 of 7

COMPONENTS

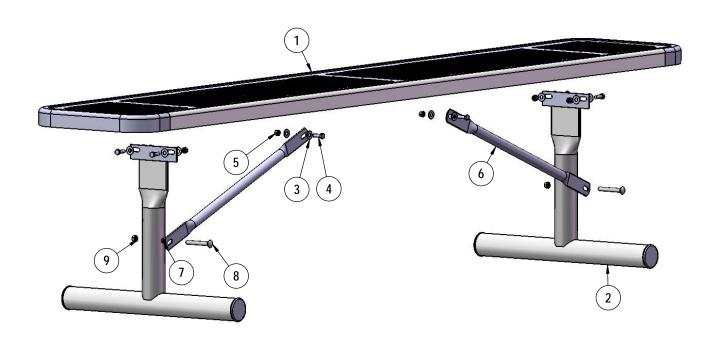


ITEM NO. PartNo DESCRIPTION QTY. 1 T-DP96-S 8' Punched Deluxe Seat 1 2 P-V942P 942P Vinyl Leg 2 3 33-02-0007 5/16" SS Washer 12 4 33-05-0029 5/16" x 1" Machine Bolt (SS) 6 5 33-03-0012 5/16" Kep Nut (SS) 6 6 P-01-04-0129 26 3/4" Brace 2 7 33-02-0008 3/8" Flat Washer (SS) 2 8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2 9 33-03-0013 3/8" Kep Nut (SS) 2				
2 P-V942P 942P Vinyl Leg 2 3 33-02-0007 5/16" SS Washer 12 4 33-05-0029 5/16" x 1" Machine Bolt (SS) 6 5 33-03-0012 5/16" Kep Nut (SS) 6 6 P-01-04-0129 26 3/4" Brace 2 7 33-02-0008 3/8" Flat Washer (SS) 2 8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2	ITEM NO.	PartNo	DESCRIPTION	QTY.
3 33-02-0007 5/16" SS Washer 12 4 33-05-0029 5/16" x 1" Machine Bolt (SS) 6 5 33-03-0012 5/16" Kep Nut (SS) 6 6 P-01-04-0129 26 3/4" Brace 2 7 33-02-0008 3/8" Flat Washer (SS) 2 8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2	1	T-DP96-S	8' Punched Deluxe Seat	1
4 33-05-0029 5/16" x 1" Machine Bolt (SS) 6 5 33-03-0012 5/16" Kep Nut (SS) 6 6 P-01-04-0129 26 3/4" Brace 2 7 33-02-0008 3/8" Flat Washer (SS) 2 8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2	2	P-V942P	942P Vinyl Leg	2
5 33-03-0012 5/16" Kep Nut (SS) 6 6 P-01-04-0129 26 3/4" Brace 2 7 33-02-0008 3/8" Flat Washer (SS) 2 8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2	3	33-02-0007	5/16" SS Washer	12
6 P-01-04-0129 26 3/4" Brace 2 7 33-02-0008 3/8" Flat Washer (SS) 2 8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2	4	33-05-0029	5/16" x 1" Machine Bolt (SS)	6
7 33-02-0008 3/8" Flat Washer (SS) 2 8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2	5	33-03-0012	5/16" Kep Nut (SS)	6
8 33-06-0058 3/8" x 3" Carriage Bolt (SS) 2	6	P-01-04-0129	26 3/4" Brace	2
9	7	33-02-0008	3/8" Flat Washer (SS)	2
9 33-03-0013 3/8" Kep Nut (SS) 2	8	33-06-0058	3/8" x 3" Carriage Bolt (SS)	2
	9	33-03-0013	3/8" Kep Nut (SS)	2



3/12/2019 Page 4 of 7

STEP 1

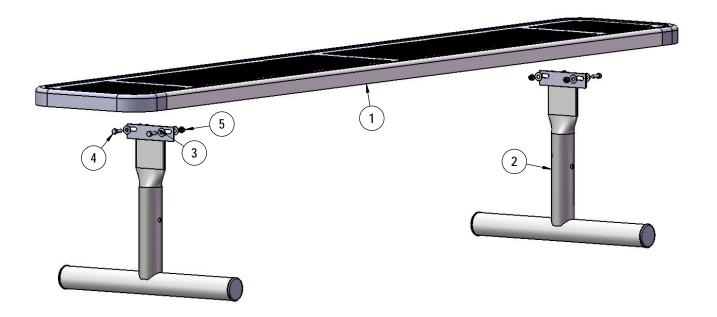


Attach the 8' Punched Deluxe Seat to the Legs using specified hardware.



3/12/2019 Page 5 of 7


STEP 2

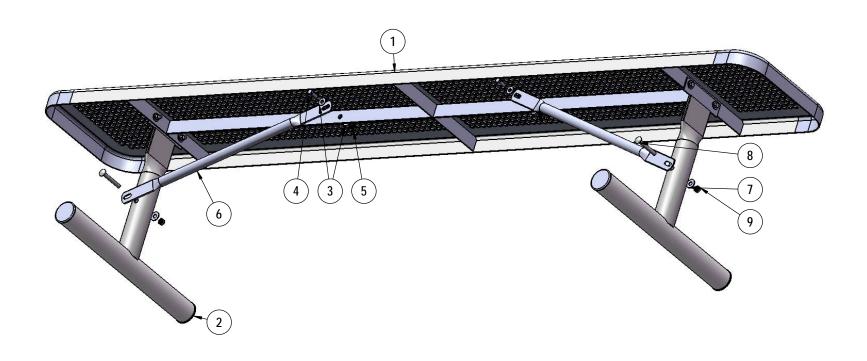

Attach the 26-3/4" Braces to the 8' seat and Legs using specified hardware as shown.



3/12/2019 Page 6 of 7

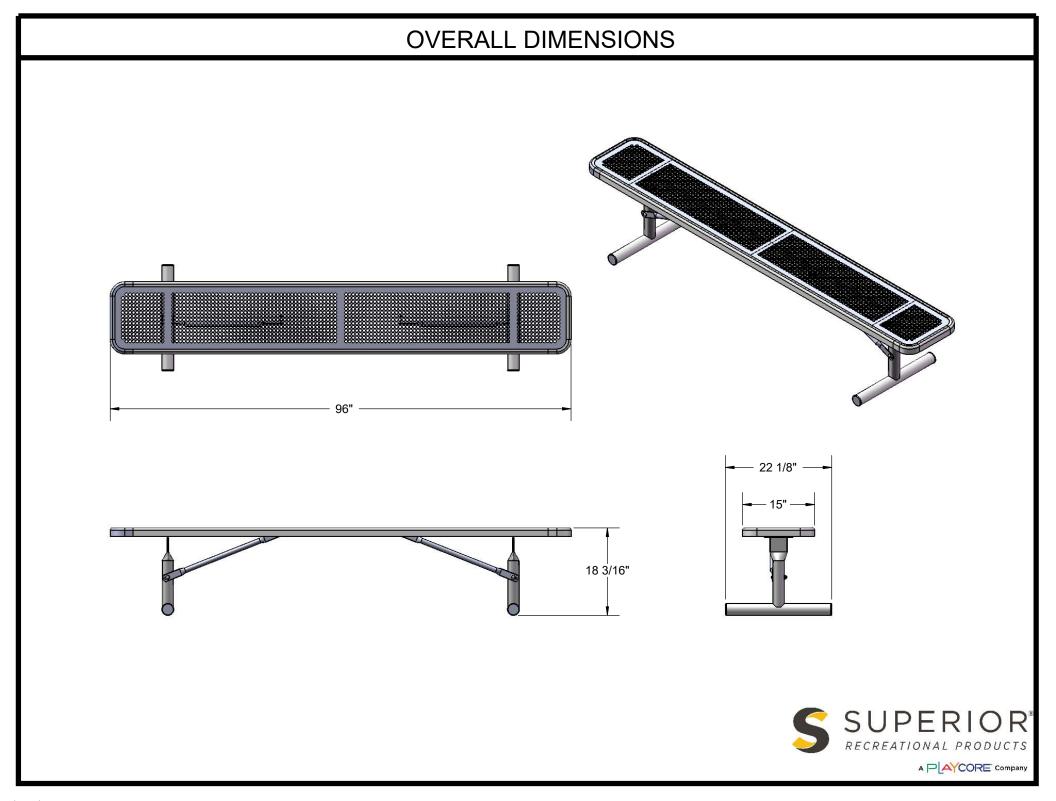

3/12/2019 Page 7 of 7