

USER GROUP: 2-5 Years, 5-12 Years

RECOMMENDED CREW: 1 Person

TOOLS REQUIRED:

- TT-45 Torx, 9/16" Hex
- Level, Square
- Drill Bits: None
- High Speed 3/8" Electric Drill with Clutch


NOTE: Use of any other driver may result in damage to tool and/or hardware!

INSTALLATION TIME: 1/2 Hour

WEIGHT: 45 lbs.

CONCRETE REQUIRED: None

ITEM	Part No.	QTY	DESCRIPTION
1	BMP-0001XX	1	ADA Half Ramp (Black) - 60" L x 43" W
2	LTH	6	30" Timber Stake
3	BMP-0002XX	2	Border Cap (Black)

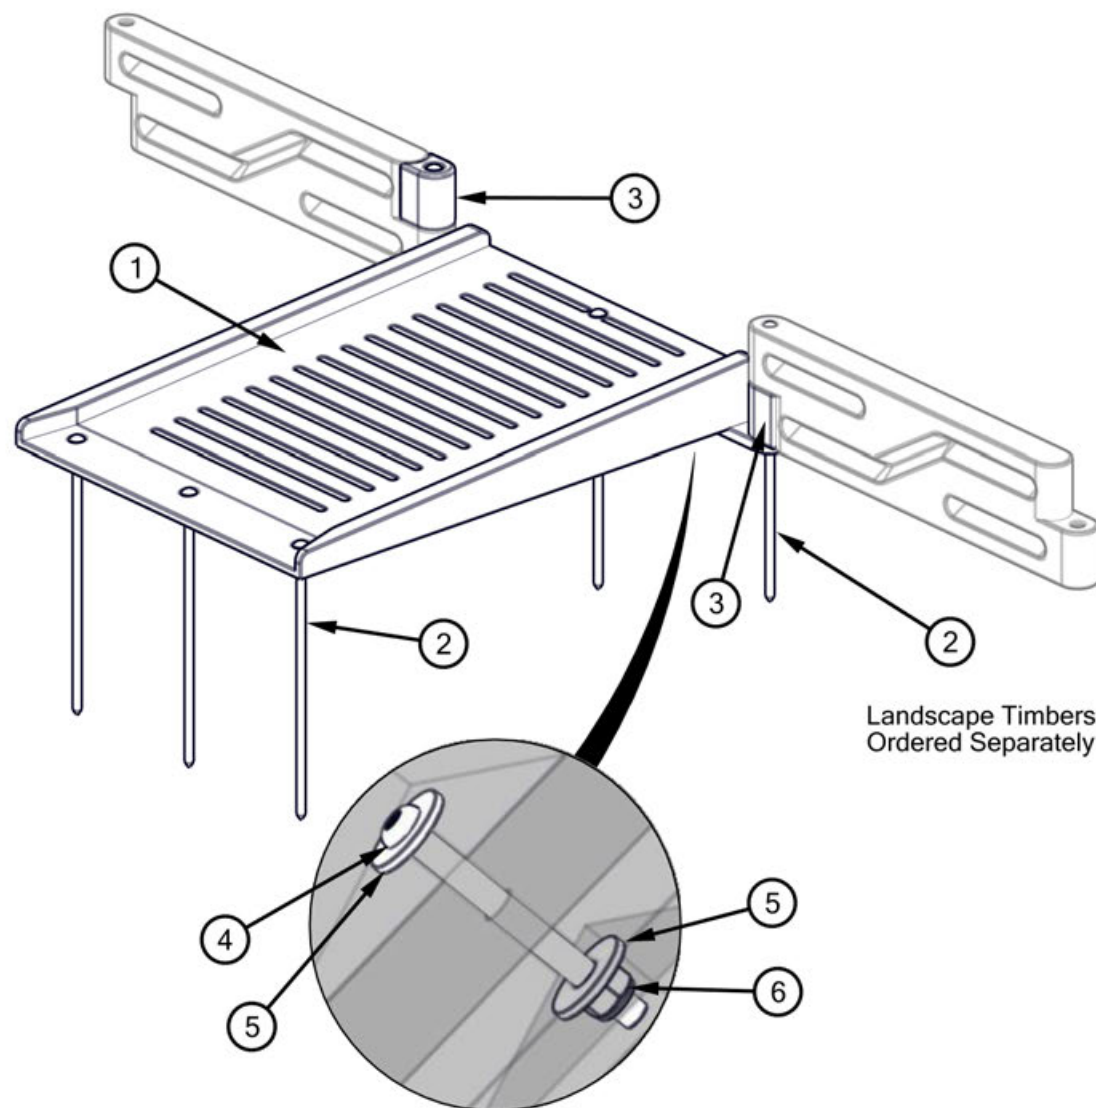

Landscape Timbers
Ordered Separately

PRE-INSTALLATION CHECK:



Customer is responsible for verifying materials received by comparing received items with packing list. If any parts are missing or damaged, including documentation, contact your local sales representative immediately.

Supplier is not responsible for items discovered missing after 72 hours from time of delivery.

Before beginning installation, all installers must read and understand the Installation Introduction manual as supplied. If you did not receive a copy, or if you have any questions regarding any information in the Installation Instructions or this Installation Guideline, contact your local sales representative.


STEP 1

If adjacent ramps are butted together, secure with two (2) sets of hardware. Secure together with two (2) 3/8" x 4" security Torx, four (4) 3/8" x 1-1/4" flat washers, and two (2) 3/8" Nylon lock nuts. See Detail 1-1.

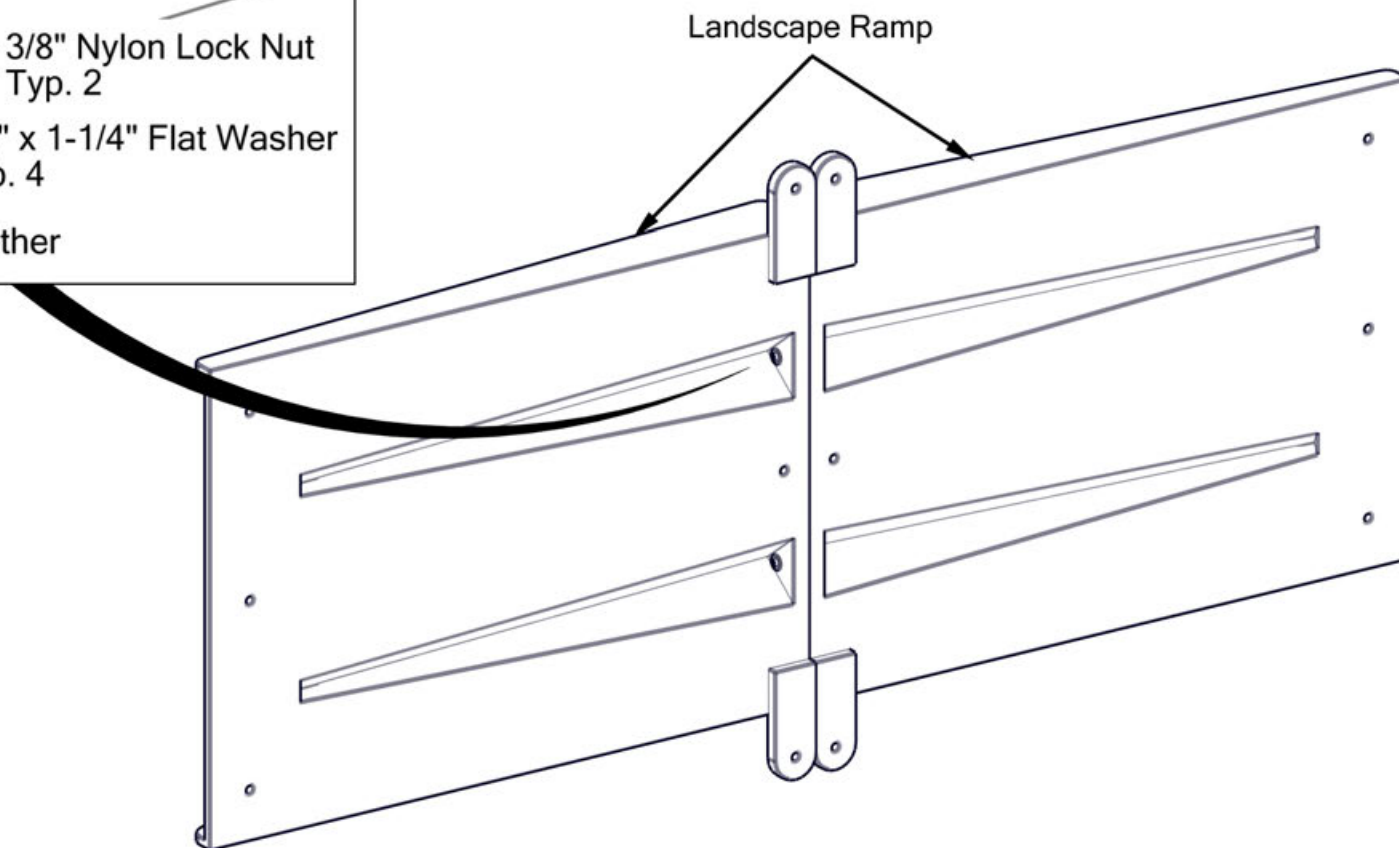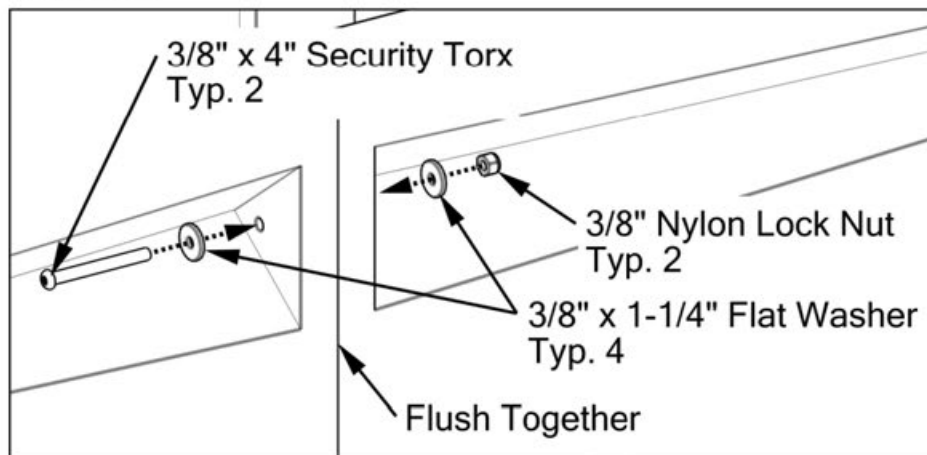Detail 1-1

STEP 2

Position ramp based upon layout drawing. Ensure end of ramp is in correct location. Ensure ramp is flush against connecting structure. Ensure tabs on ramp align with positions of landscape timbers. Drive in four (4) timber stakes. Ensure stakes are secure and flush against ramp. Do not over-drive stakes.

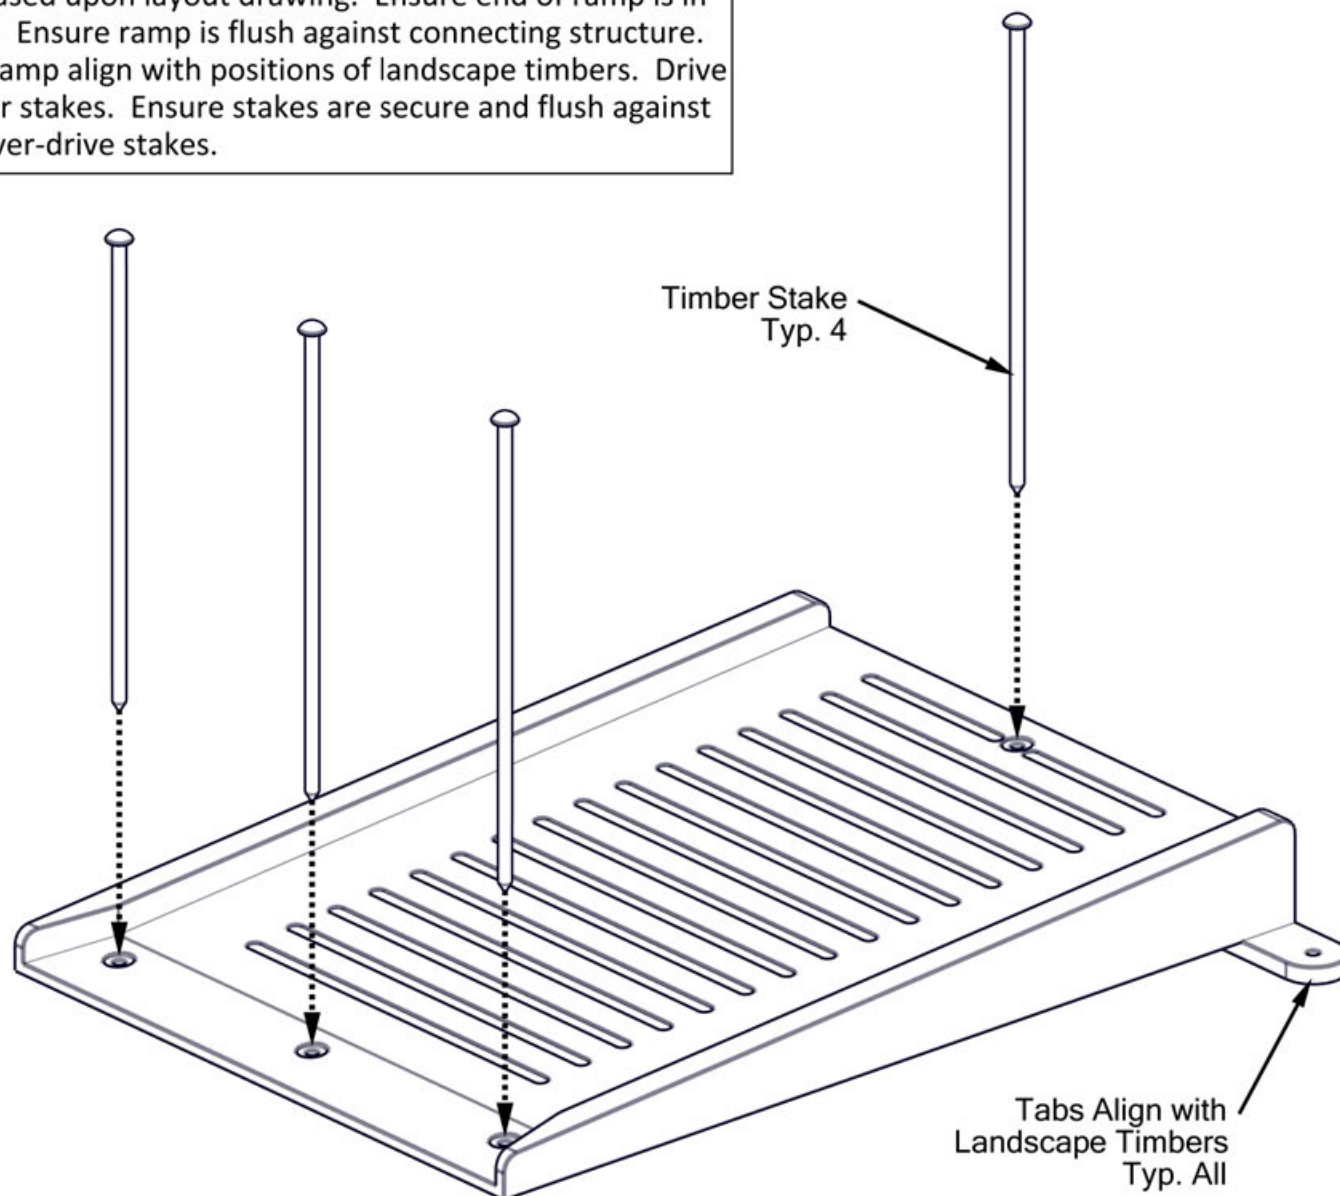

STEP 3

Connect landscape timbers to sides of ramp. Place one (1) filler cap on each side of ramp. Align holes in filler caps with holes in ramp and holes in landscape timbers. Drive in two (2) timber stakes. Ensure stakes are secure and flush against surfaces. Do not over-drive stakes. Check all connections and ensure structure is stable. Installation is complete.

